

2

1

LEFT END ARCH

LEFT CENTER ARCH

B

B


ATTACH RUNNER USING  
1 - 1/2" x 3 1/2" HEX BOLTS w/  
1/2" STOVER NUT

ATTACH RUNNER USING  
1 - 1/2" x 3 1/2" HEX BOLTS w/  
1/2" STOVER NUT

3 - HOLE RUNNER

3 - HOLE RUNNER

A

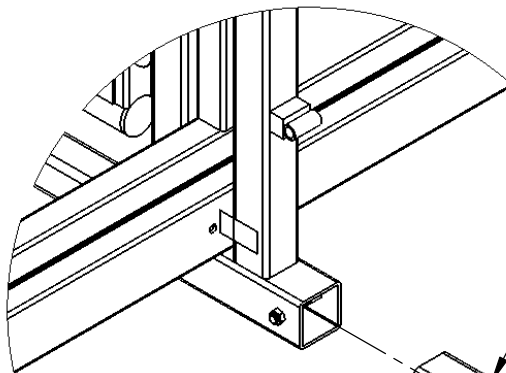

1 - 1/2" x 3 1/2" HEX BOLTS w/  
1/2" STOVER NUT

DETAIL A  
SCALE 1 : 10

A

A

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF REDRIVERARENAS. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF REDRIVERARENAS IS PROHIBITED.

006 STEP SIX - LEFT FRONT RUNNERS

REDRIVERARENAS.COM

PHONE: 1-325-625-1900

SHEET 08

2

1